



INSTRUCTION SHEET OF RECESSED MOUNTED PROFILE

Cautions:


1. Make sure the power stay on power "OFF" position before safe operation;
2. The installation operator must hold a qualified electrician certificate.
3. Check the lighting fixture and accessories before installation. If there is any damage in lamp body or glass ,please stop the installation.

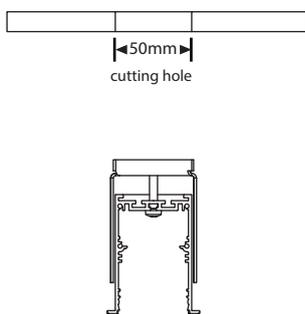


step 1_ prepare the cutting hole

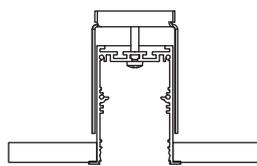


step 2_ insert the profile to the hole

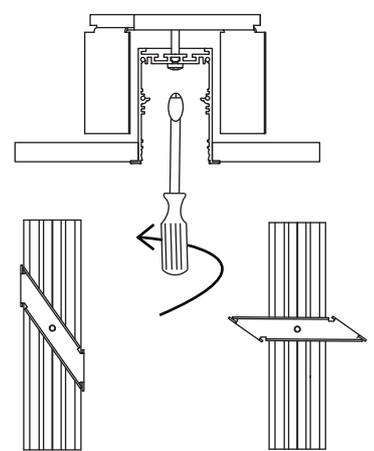


step 3_ screw the fixation parts in order to 'open' the tool

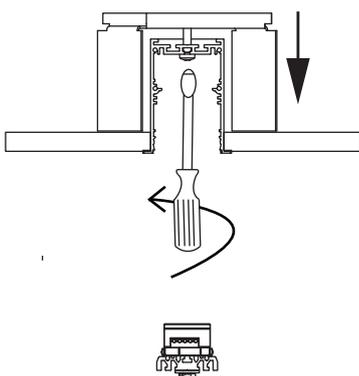

step 4_ keep screwing to 'lock' the fixation part with the ceiling
Connect the terminal block according the electrical instructions.

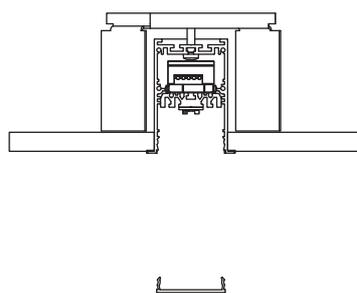

step 5_ insert the heatsink with LED part and connect the fast terminal block

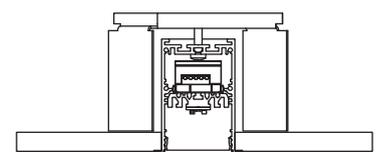

step 6_ insert the plastic cover