


Accessories Installation


NEO 360 concealed accessories

VI.1

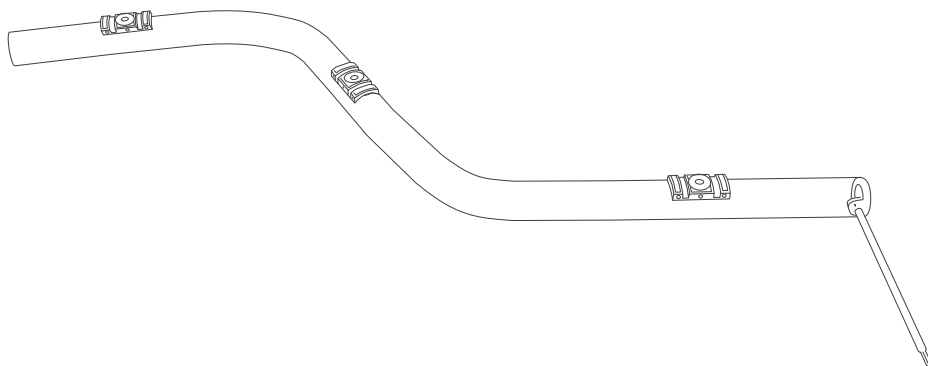

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.


Prepare materials



Neo strip



Manual



Concealed fixed
buckle




Rubber plug
screw



Steel needle



Rolled strip

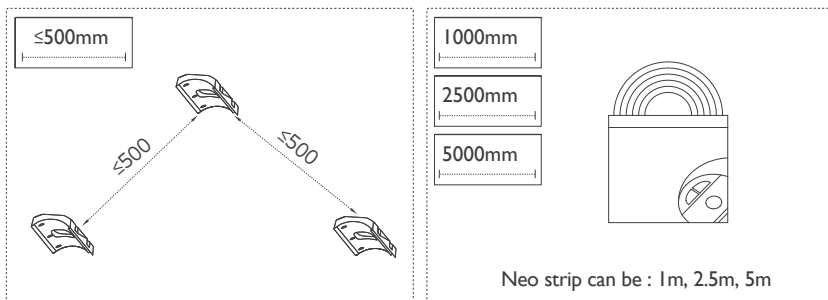


Installation tools




Screwdriver



Pen







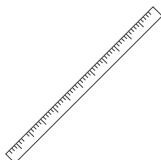



Tape measure

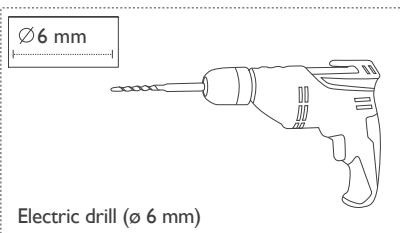



Installation Steps

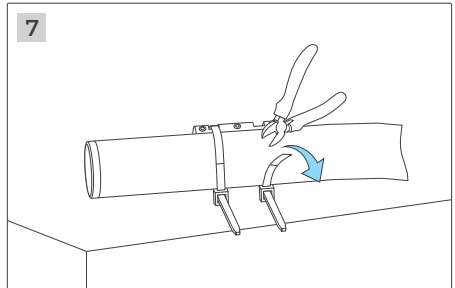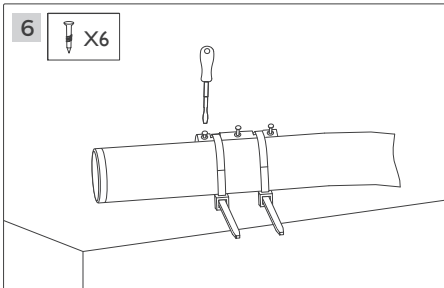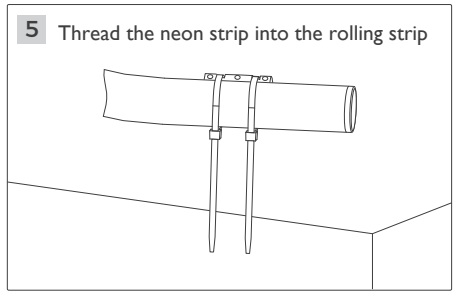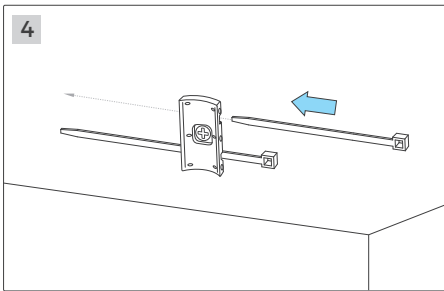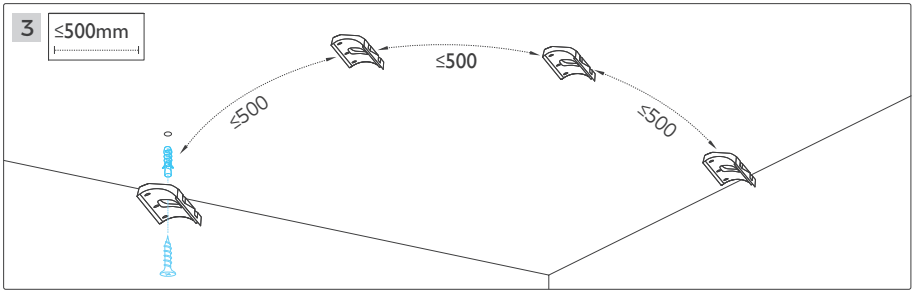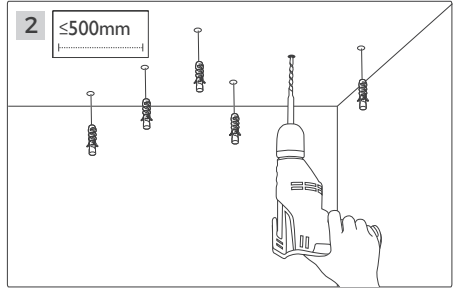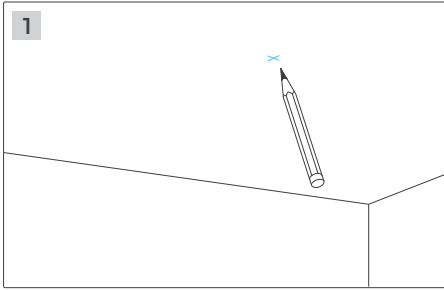


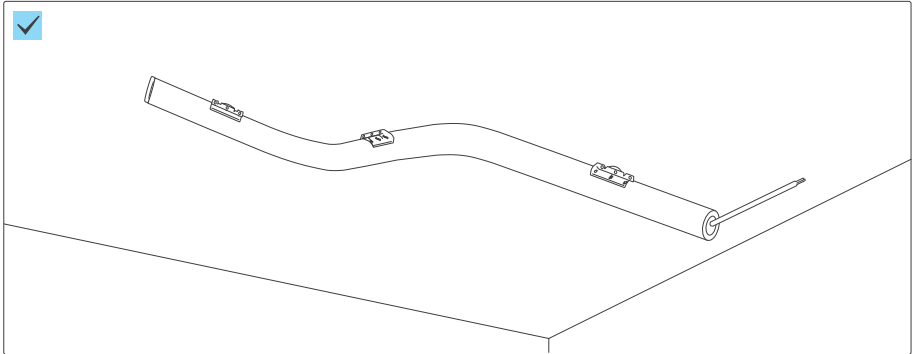

Accessories Installation


Neo 360 Horizontal ceiling mounted accessories

VI.1

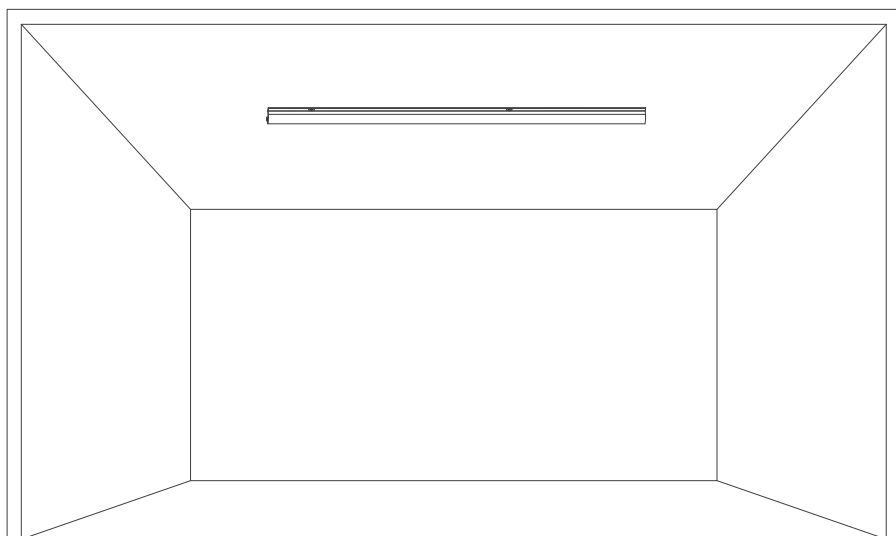

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.

Prepare materials

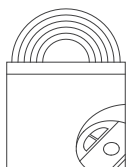

Neo strip





Manual



Rubber plug screw



PC carrier

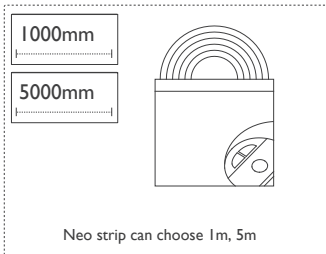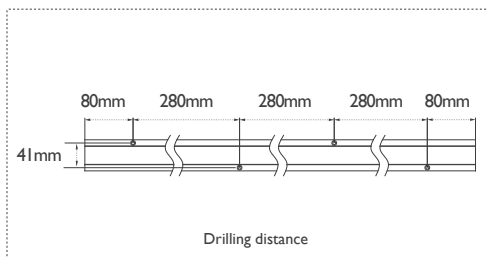


Installation tools




Phillips screwdriver



Pen




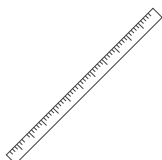



Tape measure

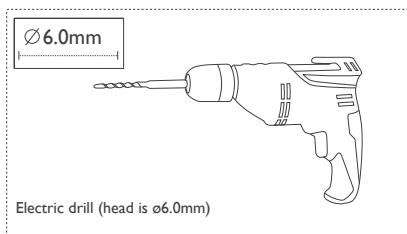



Installation Steps

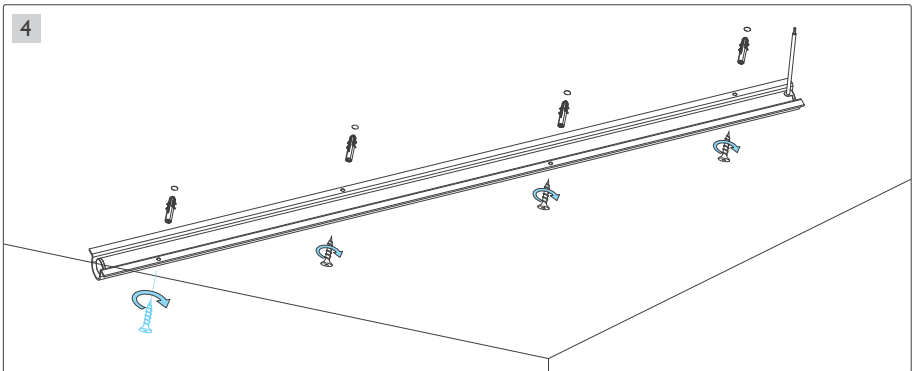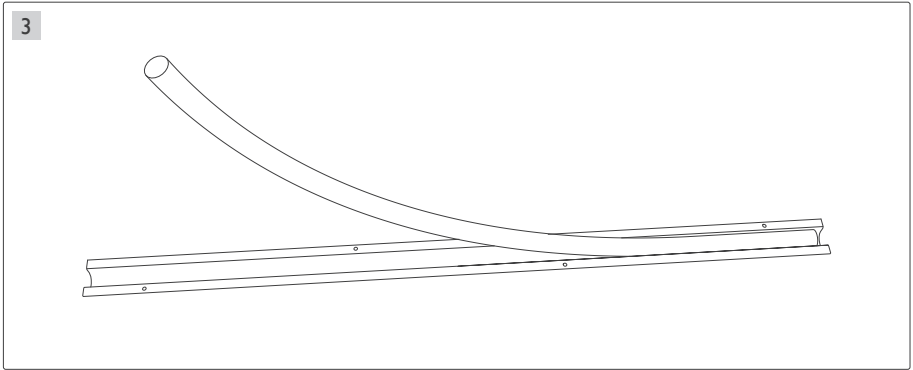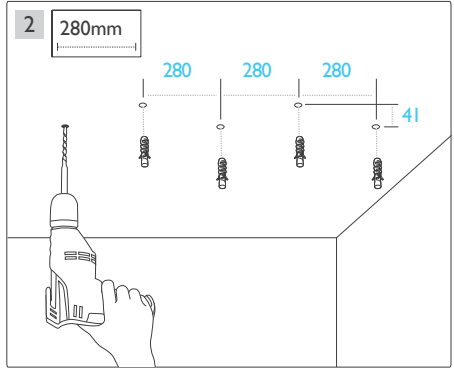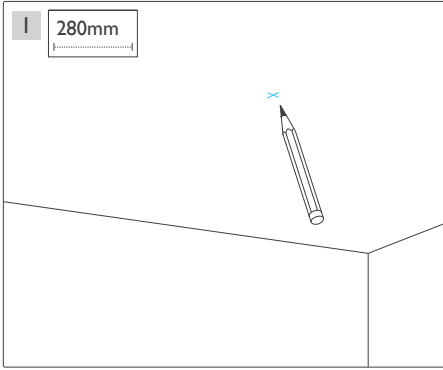


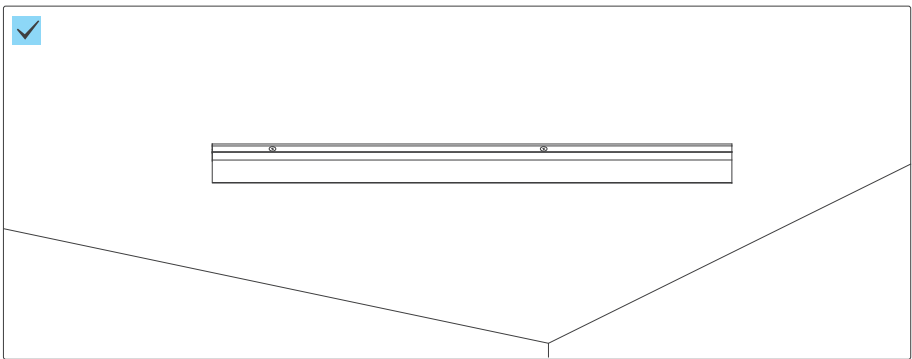

Accessories Installation


Neo 360 Horizontal suspension accessories

VI.1

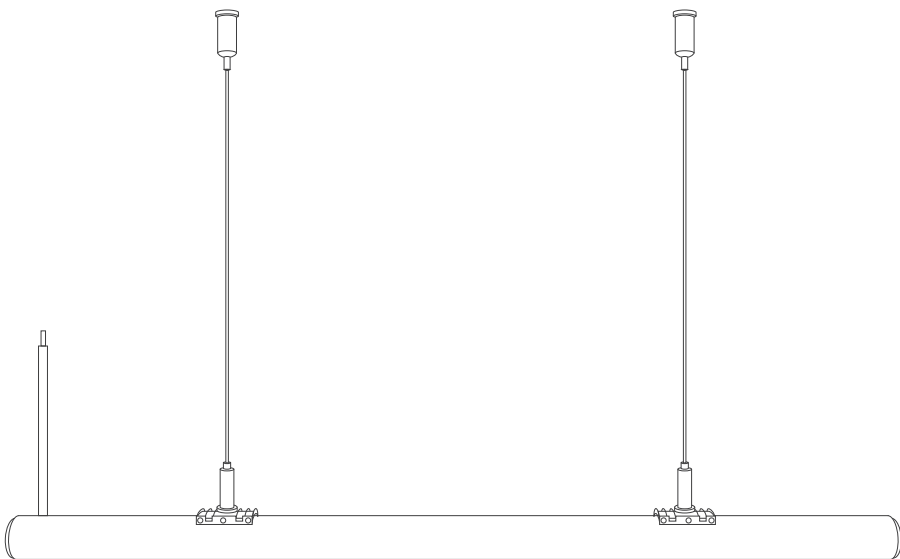

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.

Prepare materials

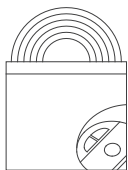

Neo strip



Manual




Rubber plug screw



PC tube



Wire rope

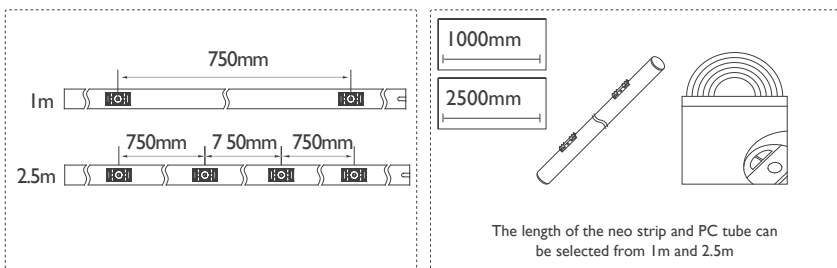


Installation tools




Phillips
screwdriver








Pen

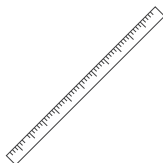


Tape measure

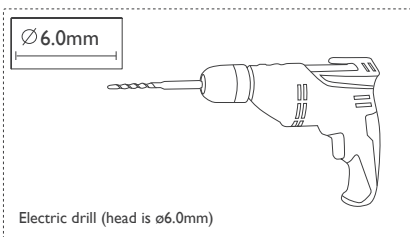

Installation Steps

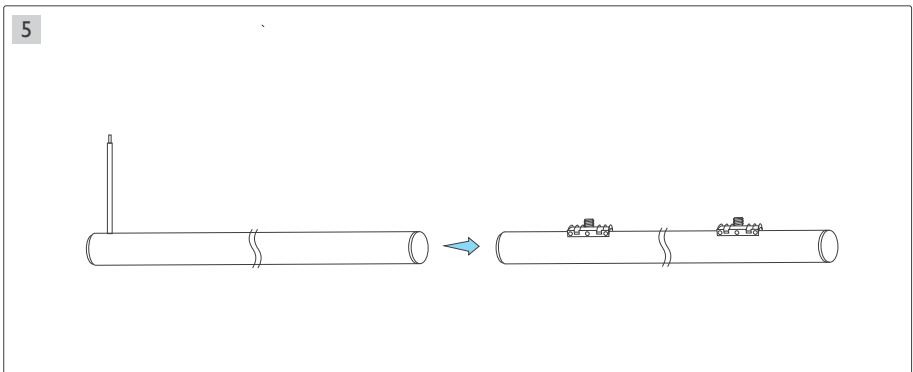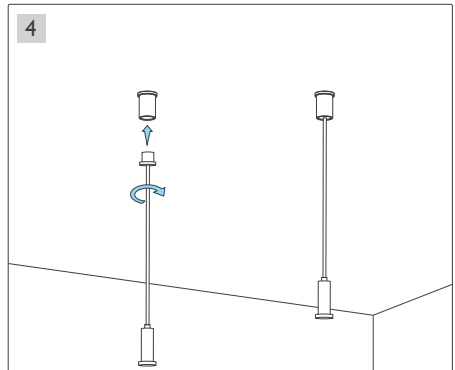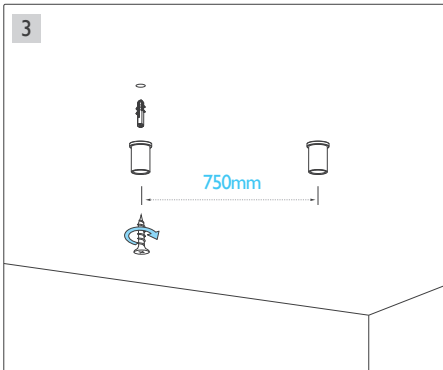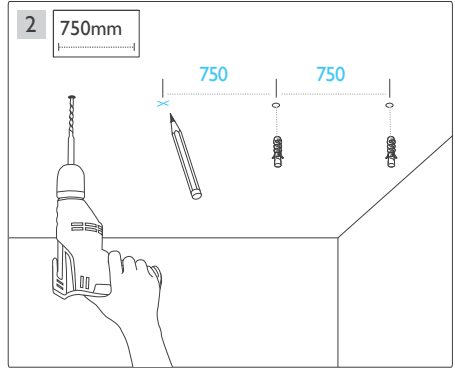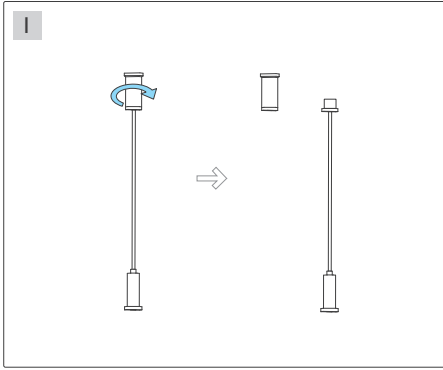


6

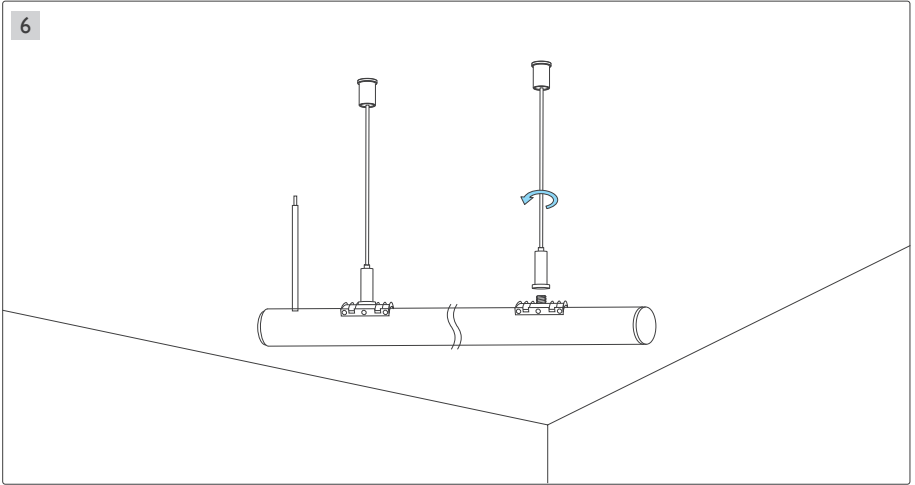

Accessories Installation


NEO 360 shapeable accessories

VI.1

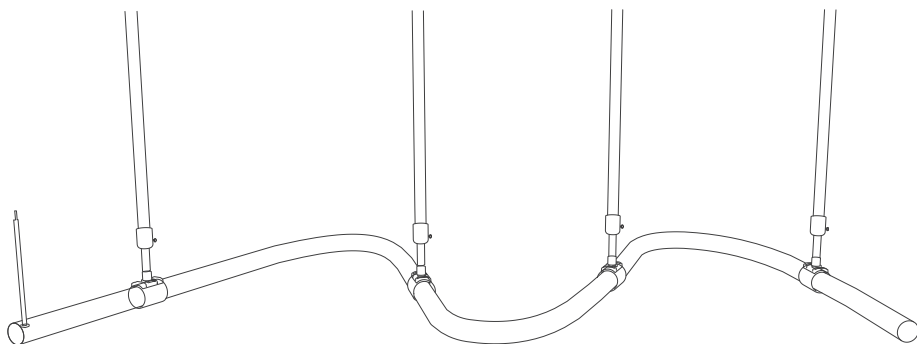

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.

Prepare materials



Neo strip



Manual





Rubber plug
screw



Modeling accessories



Telescopic boom

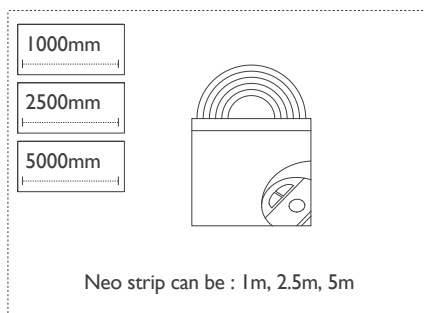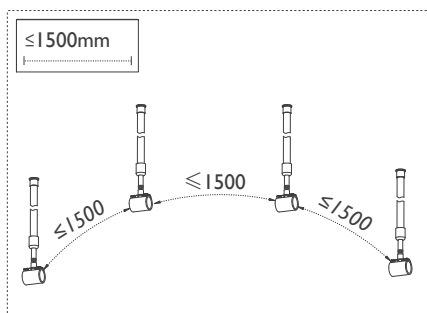


Installation tools




Screwdriver



Pen

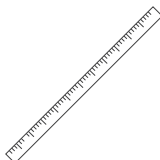






Tape measure

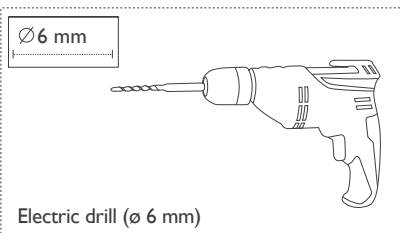



Electric drill ($\varnothing 6\text{ mm}$)





Installation Steps

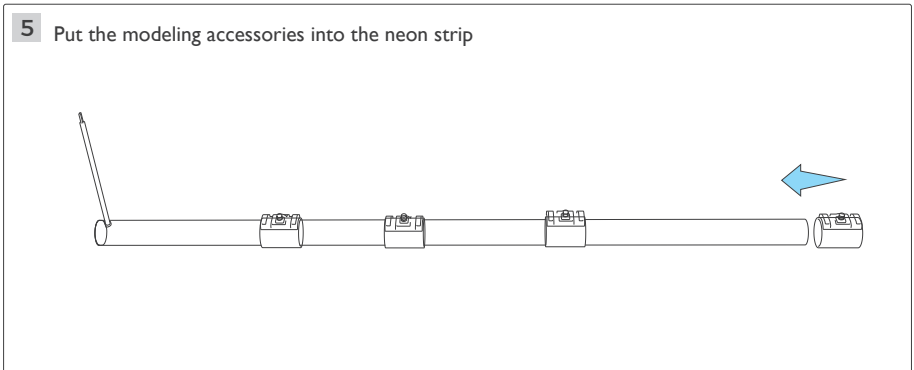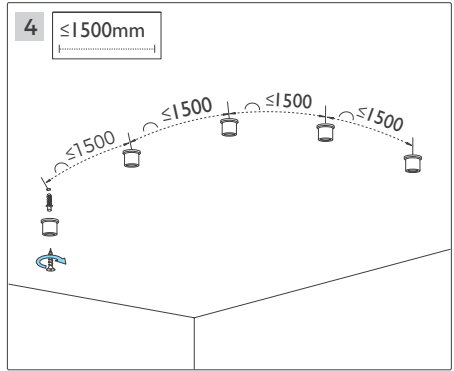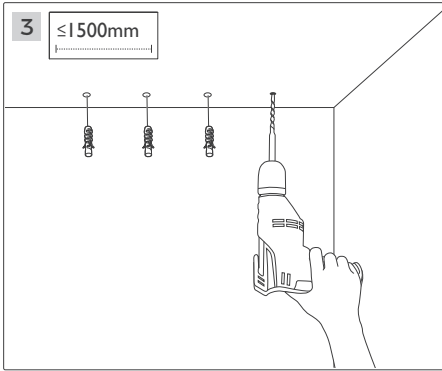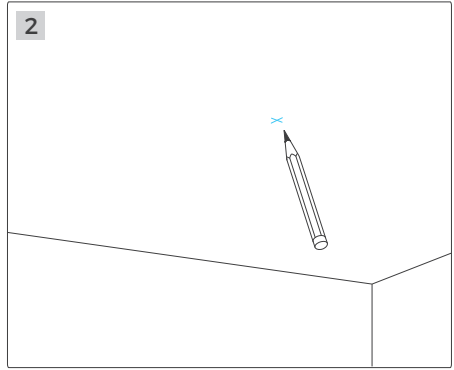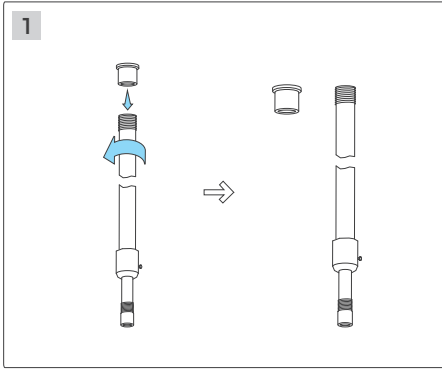

Installation Steps

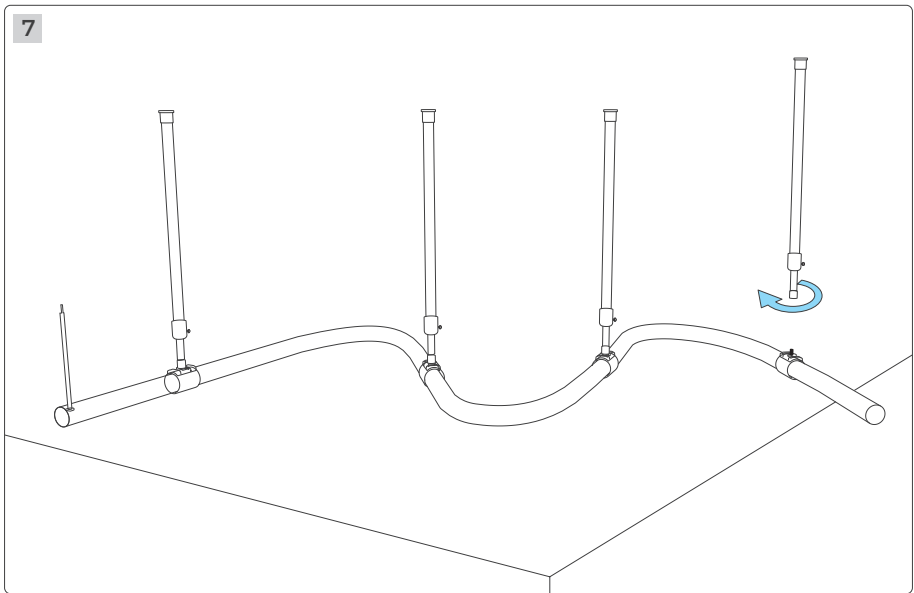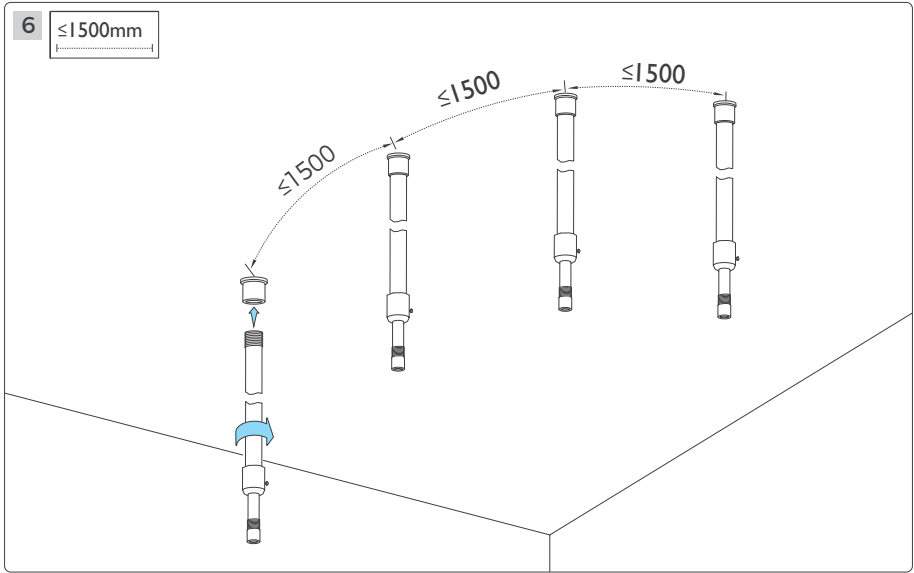


Installation Steps

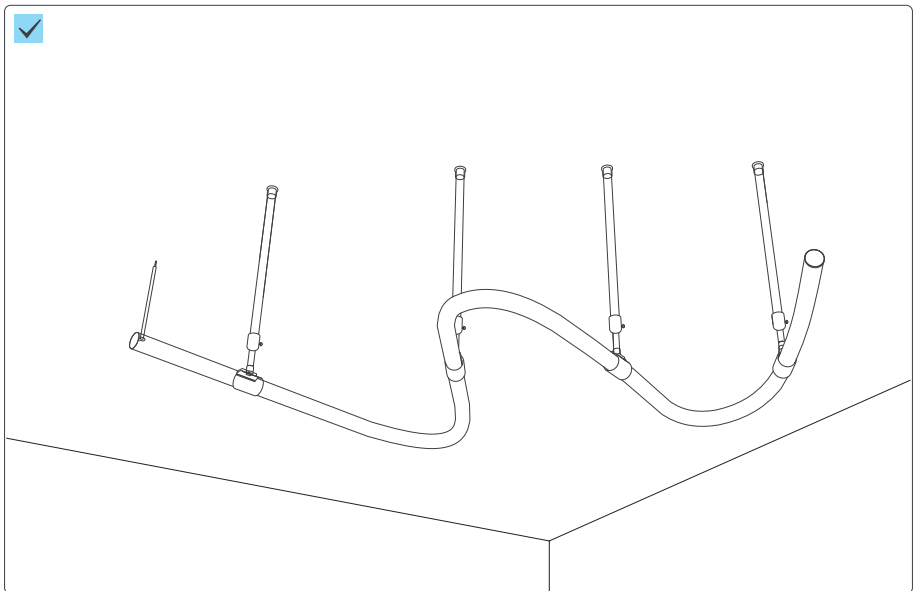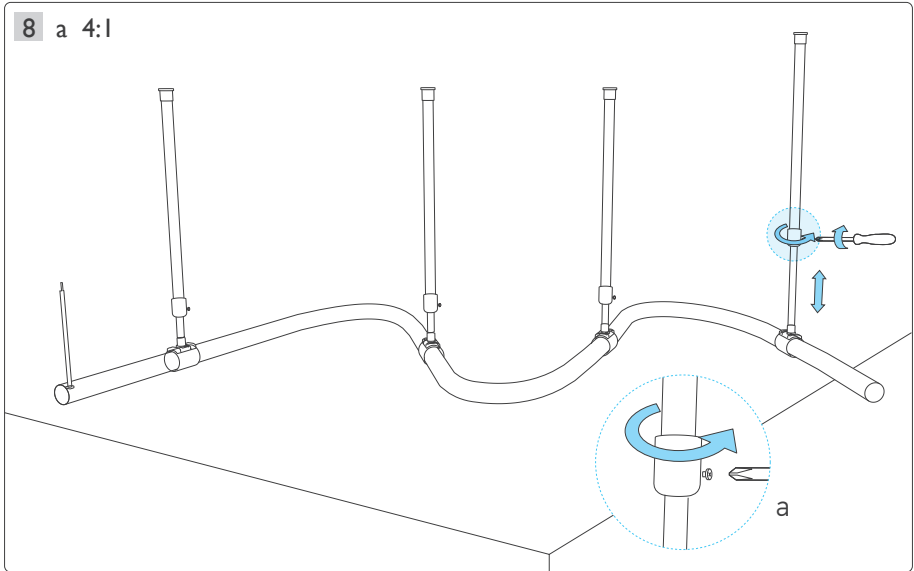

Accessories Installation


Neo 360 Splicing accessories

VI.1

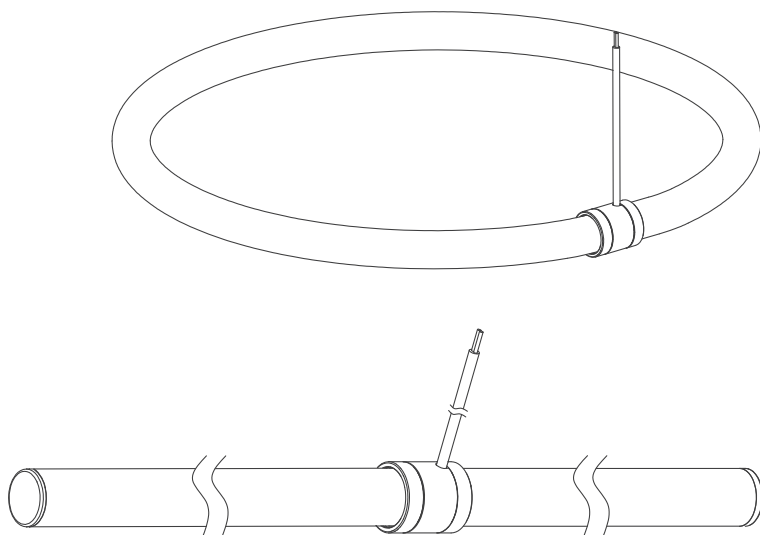

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.

Prepare materials

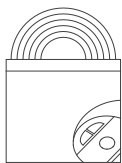


Neo strip




Manual



Countersunk screw

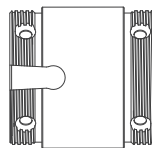

Splicing piece

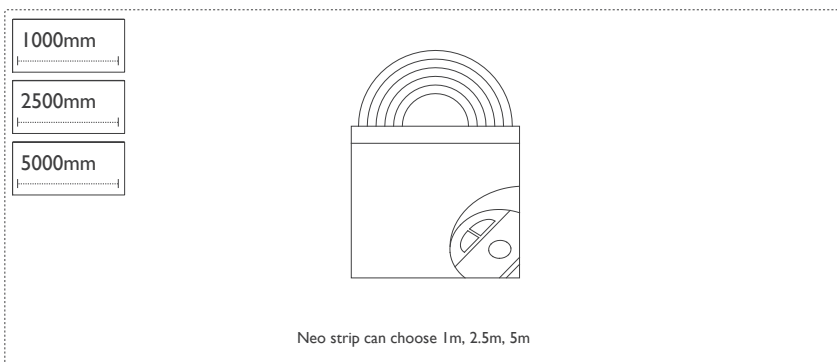

Installation tools




Phillips
screwdriver




Prepare materials


- 1 a 2:l Put the connecting ring into the neo strip

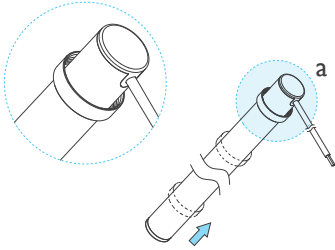


- 2 a 2:l

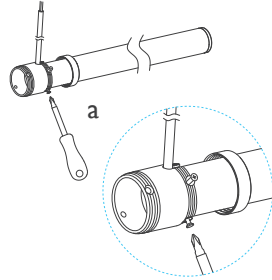



- 3 Screw the connecting ring back to the connecting piece

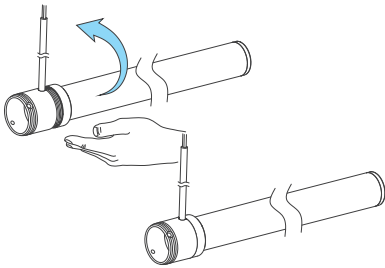

- 4 a 2:l

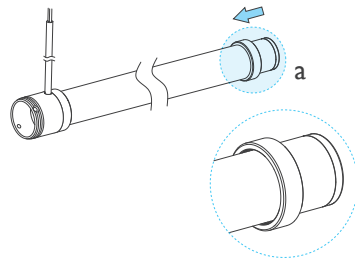


- 5 a 3:l

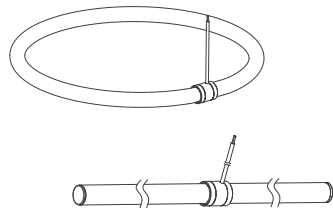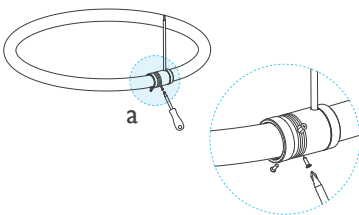


Accessories Installation

Neo 360 Vertical ceiling mounted accessories VI.1

Single Ended

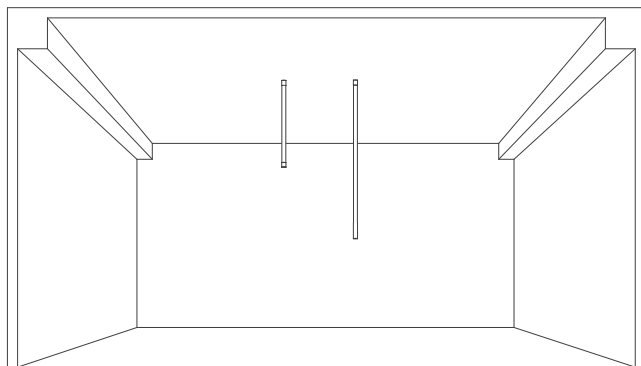

Double Ended

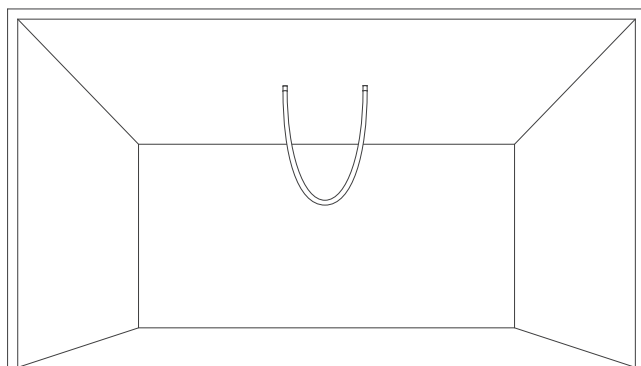

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.

Prepare materials- Single Ended



Neo strip



Manual



Rubber plug screw



End capscrew



Countersunk screw




PC tube



Metal accessories



Allen wrench

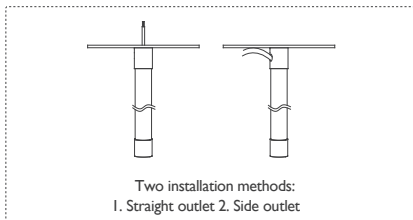

The length of the neo strip and PC tube 1m and 2.5m option

Prepare materials- Double Ended



Neo strip



Manual



Rubber plug screw




Countersunk screw



Metal accessories



Allen wrench

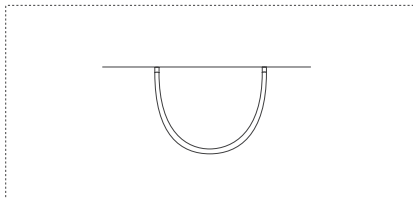

Neo strip can choose 1m, 2.5m, 5m

Installation tools




Phillips screwdriver



Slotted screwdriver




Pen

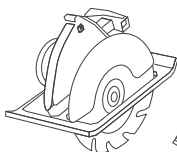

Cutting Machine



Tape measure








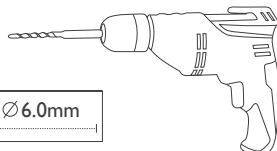


∅6.0mm









Electric drill (head is ø6.0mm)



Installation Steps

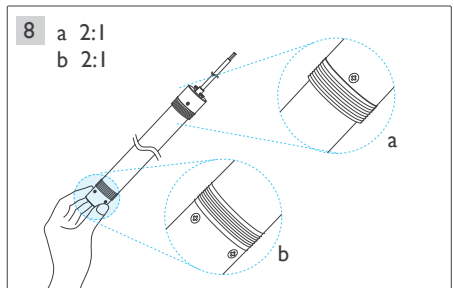
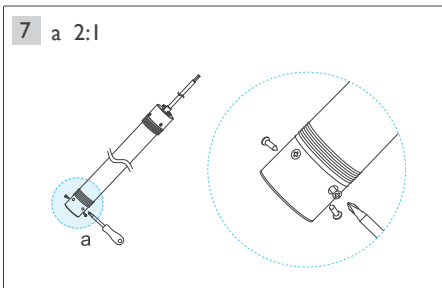
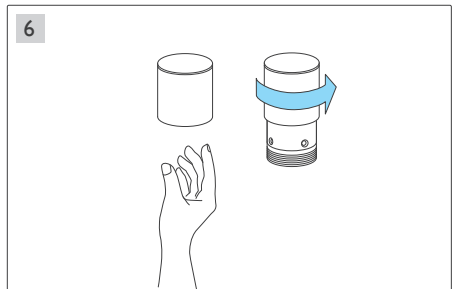
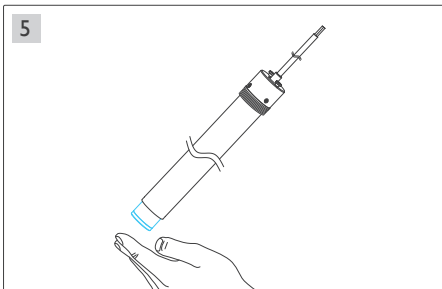
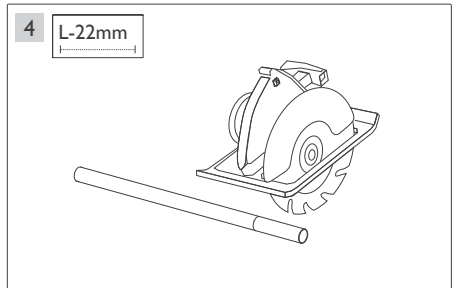
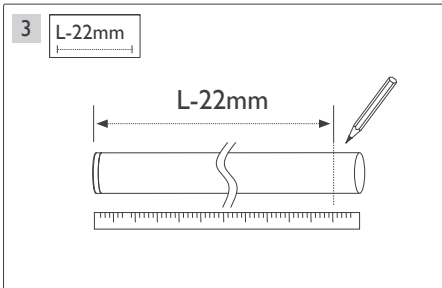
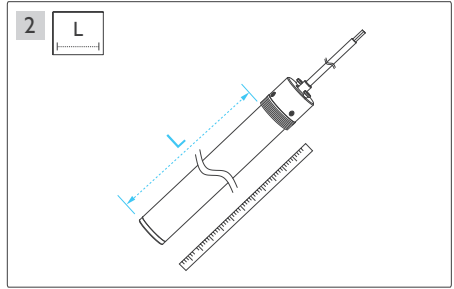
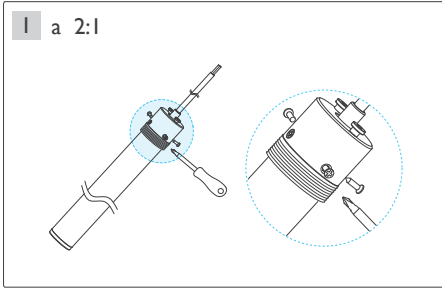


📄 Installation Steps - Single Ended

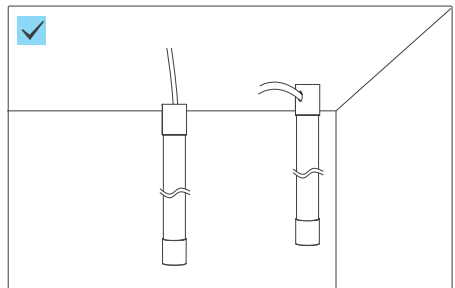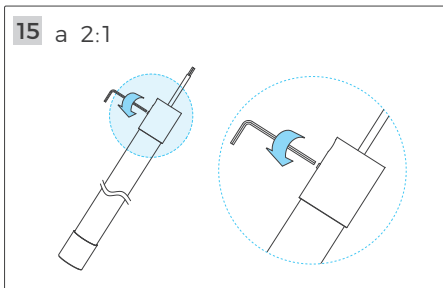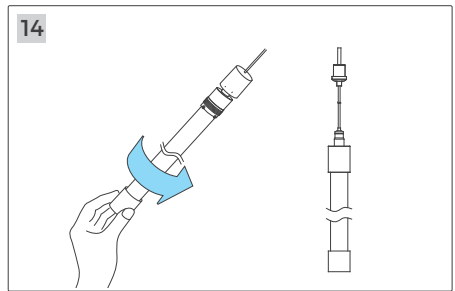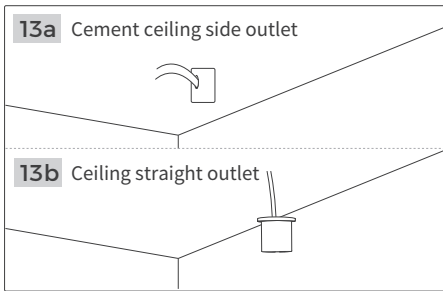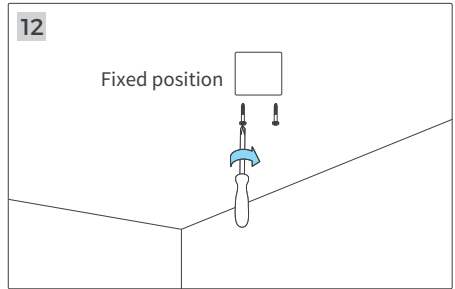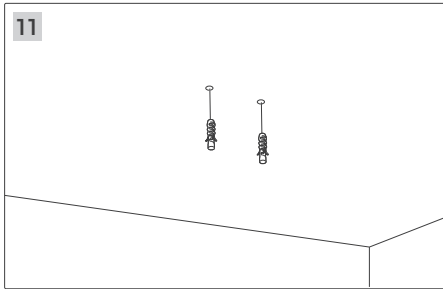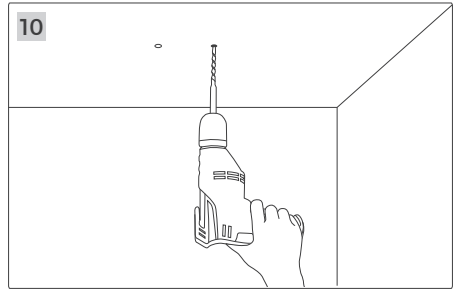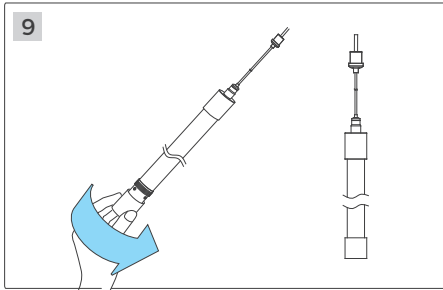



Installation Steps - Double Ended

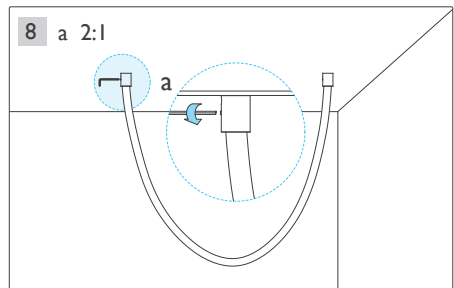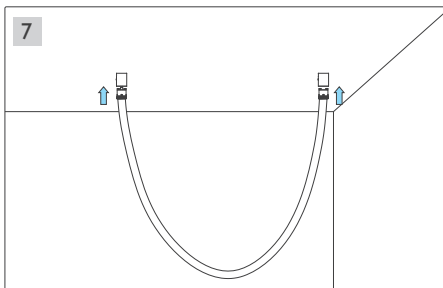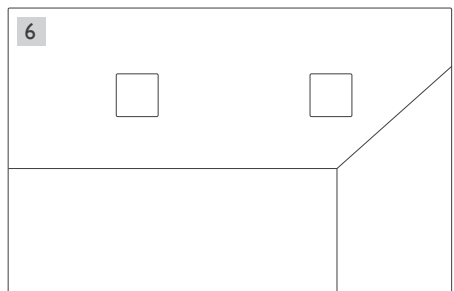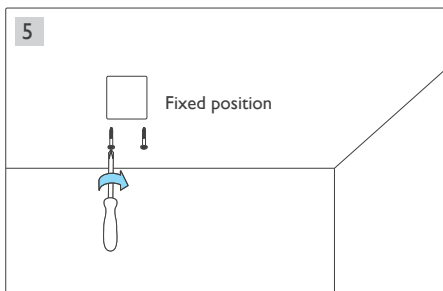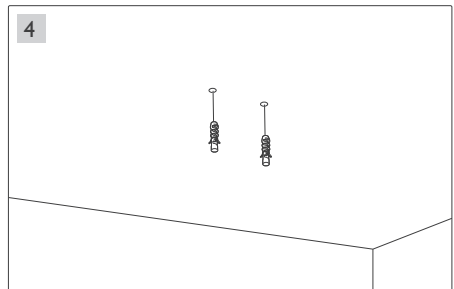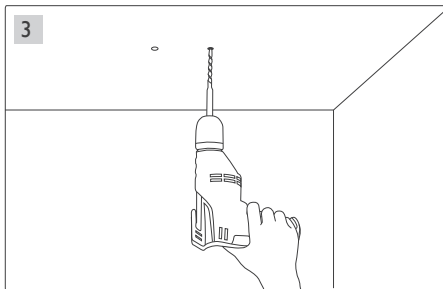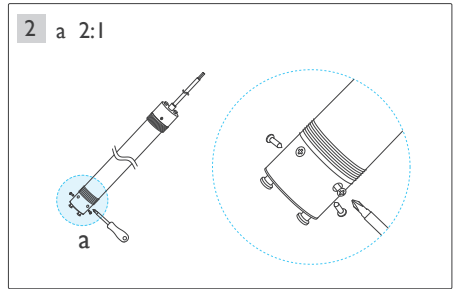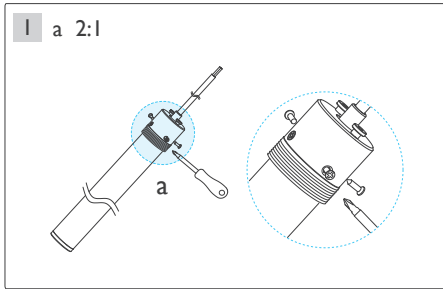



Accessories Installation

Neo 360 Vertical suspension accessories


VI.1



Side/ Cement Ceiling

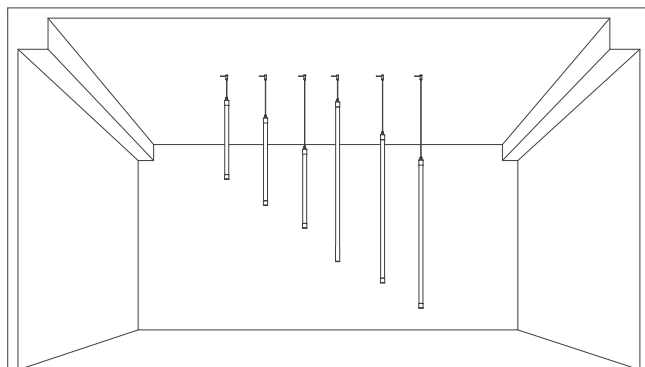

Top/ Suspended Ceiling

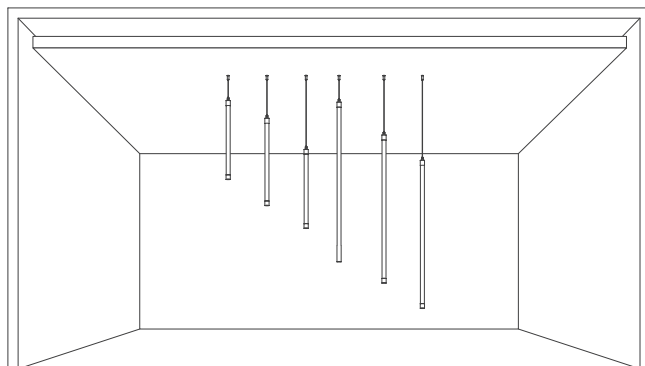

Please read this manual carefully before installation, and install the product in the correct way. Please keep it after reading, so that all users of this product can check it at any time.

Prepare materials



Neo strip



Manual




PC tube





Rubber plug screw



Countersunk screw



Two-in-one wire

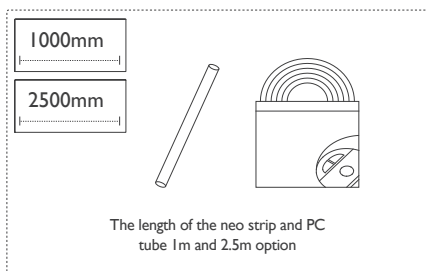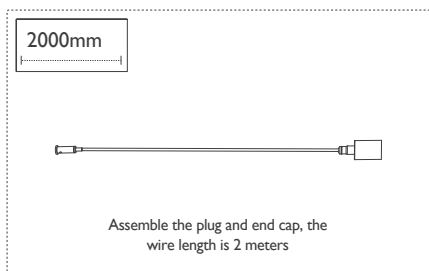


Installation tools





Phillips screwdriver



Slotted screwdriver

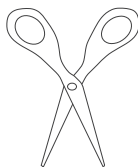

Scissors

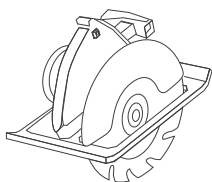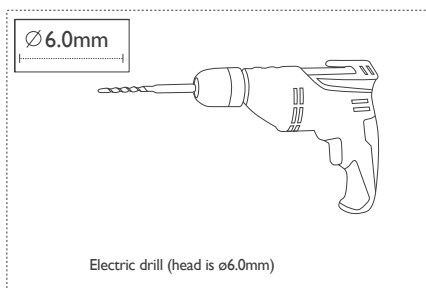

Cutting Machine










Pen




Tape measure

Installation Steps

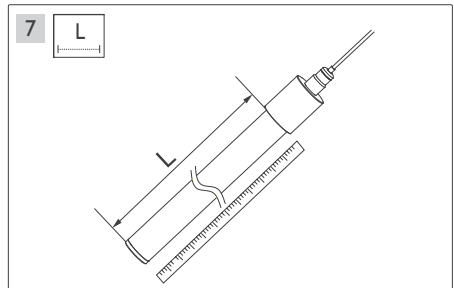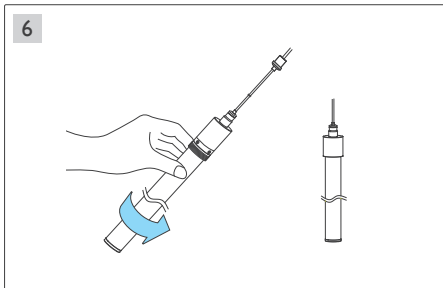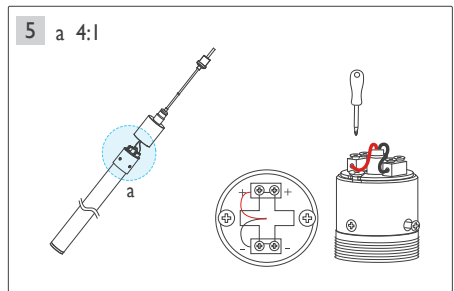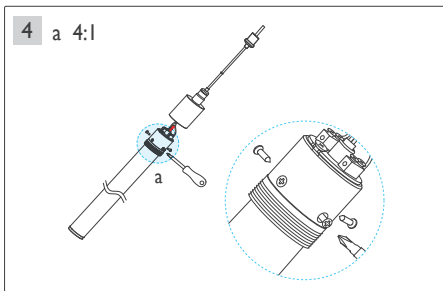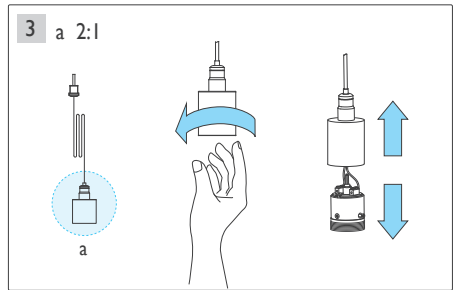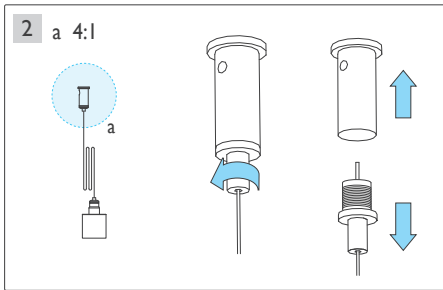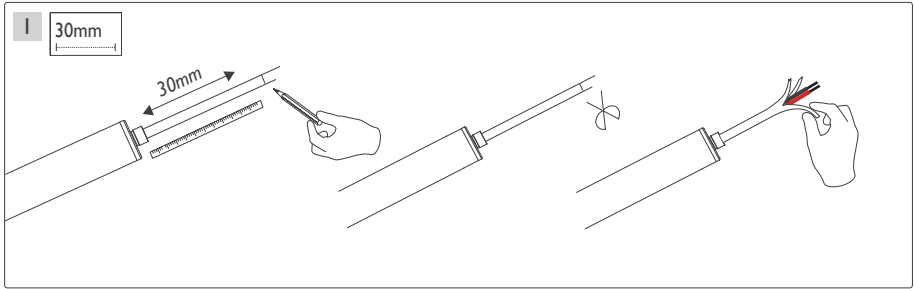


Installation Steps

8 L-22mm The PC tube is 22mm shorter than the light strip

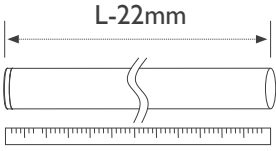


L-22mm


9 L-22mm

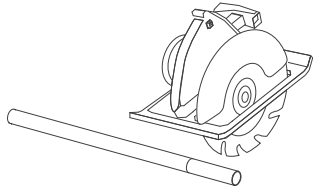


10

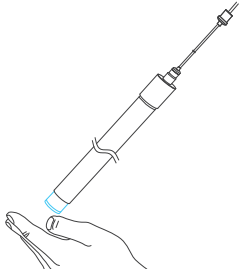

11

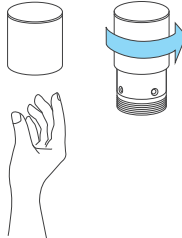


12 a 4:l

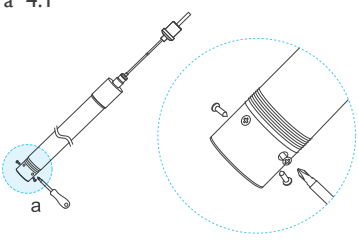

a

13 a 4:l
b 3:l

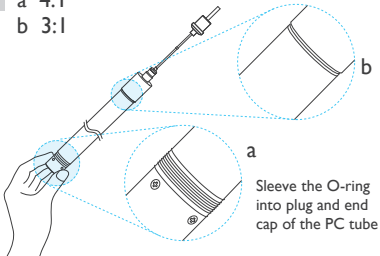


a


b

Sleeve the O-ring into plug and end cap of the PC tube

14

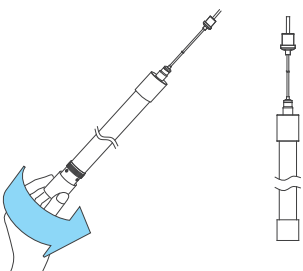

15



Installation Steps

